


**THEY'RE DESIGNED WITH  
FEATURES LIKE HEAT SHIELDS.  
BECAUSE NOBODY LIKES TO HEAR  
“WHAT’S THAT BURNING SMELL?”**



**HIGH TEMPERATURE  
BOOTS**

*are used where or when  
required by the Original  
Equipment Manufacturer.*

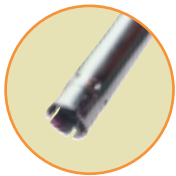

**HEAT SHIELDS**  
*offer heat protection by  
reflection and dissipation.*



The Autolite® Professional Series ignition wire sets can take the heat. Depending upon OES requirements, these wires come with special accessories like heat shields, corrosion resistant clips, moisture-proof high temperature boots, and high energy suppressor cores. Because it's not only protection for the wires, it's protection for your customers. For more information, visit [www.autolite.com](http://www.autolite.com).

**Autolite®**